

شماتیک نحوه تنظیم ساعت



تاج در پوزیشن یک
حالت معمول کارکرد ساعت

تاج در پوزیشن دو
تنظیم تاریخ

با گردش در جهت عقربه های ساعت

تاج در پوزیشن سه
تنظیم تاریخ

با گردش خلاف عقربه های ساعت

تاج در پوزیشن دو
تنظیم دقیق تر خط تاریخ
با گردش خلاف عقربه های ساعت

The watch crown has three positions with the following functions:

Position 1 – Crown pushed in: this is the basic setting and the normal operating condition of the watch.

Position 2 – Crown in the middle position: This allows you to set the date, by turning the crown in a **clockwise direction**. By turning the crown in an **anti-clockwise direction**, you can reset the point at which the date change occurs to precisely “0.00 o’clock” in Position 2, if this has become accidentally changed. (see date synchronization)

Position 3 – Crown pulled out all the way: this allows you to set the current time. Turn the crown in an **anti-clockwise direction** (the hands then turn in a clockwise direction) until the desired time is reached.

Date synchronization

Perform the following steps to correct a synchronization error (date does not change at 0.00 o’clock):

Step 1: Pull out the crown until it clicks into place in Position 3. Slowly turn the crown in an **anti-clockwise direction** (this causes the hands to turn in a clockwise direction) until the date jumps forward to any date. Stop turning once the date has completely changed.

Step 2: Push the crown back into Position 2 and then turn the crown slowly in an **anti-clockwise**

direction until the hour and minute hands point exactly to “0.00 o’clock”.

Step 3: Leave the crown in Position 2 and now turn it in a **clockwise direction** in order to set the correct date.

Step 4: Then pull the crown back out into Position 3 and set the correct time. Finally, push the crown back into Position 1 so as to continue using the watch.

The date shown by your watch will now change at precisely “0.00 o’clock” again.

If you should have any further questions, please do not hesitate to contact us directly:

phone: +49 6174 961188 · e-mail: info@botta-design.de